

AD-A116 790

EIC LABS INC NEWTON MA

F/G 10/3

LITHIUM CYCLING IN POLYMETHOXYMETHANE SOLVENTS.(U)

JUN 82 J S FOODS, J MCVEIGH

N00014-77-C-0155

UNCLASSIFIED

TR-7

AM

1 of 1
AD A
116790

END
DATE
FILMED
09-82
DTIC

12

OFFICE OF NAVAL RESEARCH

Contract No. N00014-77-C-0155

Task No. NR 359-638

TECHNICAL REPORT NO. 7

LITHIUM CYCLING IN POLYMETHOXYMETHANE SOLVENTS

by

J. S. Foos and J. McVeigh

Prepared for Publication

in the

Journal of the Electrochemical Society

EIC Laboratories, Inc.
67 Chapel Street
Newton, Massachusetts 02158

June 1982

Reproduction in whole or in part is permitted for
any purpose of the United States Government

Approved for Public Release; Distribution Unlimited

DTIC
ELECTE
JUL 12 1982
S D D

82 07 12 015

AD A116790

ENC FILE COPY

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

REPORT DOCUMENTATION PAGE		READ INSTRUCTIONS BEFORE COMPLETING FORM	
1. REPORT NUMBER TECHNICAL REPORT NO. 7	2. GOVT ACCESSION NO.	3. RECIPIENT'S CATALOG NUMBER	
4. TITLE (and Subtitle) LITHIUM CYCLING IN POLYMETHOXYMETHANE SOLVENTS		5. TYPE OF REPORT & PERIOD COVERED Technical Report	
		6. PERFORMING ORG. REPORT NUMBER	
7. AUTHOR(s) J. S. Foos and J. McVeigh		8. CONTRACT OR GRANT NUMBER(s) N00014-77-C-0155	
9. PERFORMING ORGANIZATION NAME AND ADDRESS EIC Laboratories, Inc. 67 Chapel Street Newton, Massachusetts 02158		10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS NR 359-638	
11. CONTROLLING OFFICE NAME AND ADDRESS Office of Naval Research/Chemistry Program Arlington, Virginia 22217		12. REPORT DATE June 1982	
		13. NUMBER OF PAGES 11	
14. MONITORING AGENCY NAME & ADDRESS (if different from Controlling Office)		15. SECURITY CLASS. (of this report) UNCLASSIFIED	
		15a. DECLASSIFICATION/DOWNGRADING SCHEDULE	
16. DISTRIBUTION STATEMENT (of this Report) Approved for Public Release; Distribution Unlimited.		Accession For NTIS GRA&I <input checked="" type="checkbox"/> DTIC TAB <input type="checkbox"/> Unannounced <input type="checkbox"/> Justification	
17. DISTRIBUTION STATEMENT (of the abstract entered in Block 20, if different from Report)		By Distribution/ Availability Codes Avail and/or Dist Special A	
18. SUPPLEMENTARY NOTES Submitted for Publication in the Journal of the Electrochemical Society.		DATE COPY INSPECTED 3	
19. KEY WORDS (Continue on reverse side if necessary and identify by block number) Lithium Batteries, Dimethoxymethane, Trimethoxymethane, LiAsF ₆ , Cycling Efficiency.			
20. ABSTRACT (Continue on reverse side if necessary and identify by block number) Solutions of LiAsF ₆ in dimethoxymethane (DMM) and trimethoxymethane (TMM) are shown to be conductive and capable of cycling Li in high efficiency in half-cells. Inspection of electrolytes stored at 70°C in the presence and absence of Li indicated that TMM is more stable than DMM. However, DMM cycles Li much better than TMM after storage.			

UNCLASSIFIED

SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)


LITHIUM CYCLING IN POLYMETHOXYMETHANE SOLVENTS

J. S. Foos and J. McVeigh
EIC Laboratories, Inc., 67 Chapel Street, Newton, MA 02158

Introduction

During the past few years several Li battery electrolytes have been reported which allow the plating and stripping of Li in greater than 95% efficiency at 25°C. Newman reported the use of LiClO₄ in dioxolane in Li/TiS₂ cells (1). The cycling efficiency in these cells is very good but unfortunately they are susceptible to detonation (2). Koch has reported the use of 2-methyltetrahydrofuran (2Me-THF) (3) and diethyl ether blends (4) as solvents for LiAsF₆ in Li half-cells. The conductivity of these electrolytes is low.

The solution of LiAsF₆ in dioxolane is an electrolyte with good conductivity but is reported to polymerize readily (5). Ring strain may contribute to the reactivity of dioxolane. It might be anticipated that the open-chain analogues of dioxolane might be less reactive. Dimethoxymethane (DMM)I and trimethoxymethane (TMM)II were investigated as solvents for possible use with LiAsF₆ in Li batteries.



I



II

We wish to report that these solvents produce conductive solutions with LiAsF₆, show good stability at 70°C, and cycle Li well in half cell tests.

Experimental

The solvents, DMM and TMM (trimethyl orthoformate), were obtained from the Aldrich Chemical Company. Before use the solvents were purified first by preliminary drying using MgSO_4 and/or molecular sieves (3A or 4A) for DMM; and molecular sieves (3A or 4A) only for TMM. Subsequently they were distilled from Na benzophenone ketyl (6). Some difficulty was encountered in forming the blue ketyl in TMM. This was attributed to surface films on the Na which can be disrupted by placing the reaction flask in an ultrasonic bath.

The electrolytes for cycling and storage tests were prepared using LiAsF_6 (U.S. Steel, as-received) with cooling using Cu shot previously cooled by dry ice. The solvents, if treated with alumina, were passed through a column of activated alumina (Woelm N-Super 1) and the first 10% discarded. Where applicable, pre-electrolyses were done by passing a current (1 mA/cm^2) between two Li metal electrodes ($\sim 30 \text{ cm}^2$) suspended in the electrolyte (100 ml) for ~ 16 hrs.

Conductivities were obtained using dried distilled DMM and TMM. The conductivities were determined in conductivity cells with cell constants determined using aqueous KCl. An AC conductivity bridge (YSI Model 31) was used to measure the cell resistance. The conductivities were determined at, or corrected to, 25°C with a precision of $\sim 5\%$.

The storage tests were done in screw cap (Teflon-lined) glass vials. These were stored at 70°C .

The Li cycling was done in prismatic glass cells containing 15-20 ml electrolyte. This experiment, described previously (7), involves making a pre-plate of 4.5 C/cm² of Li on a Ni substrate (Ni shim) followed by stripping and then re-plating 1.1 C/cm² on the pre-plated Li. The average efficiency per cycle \bar{E} , is calculated in Eq. (1):

$$E = \frac{Q_s - \frac{Q_{ex}}{n}}{Q_s} \quad (1)$$

where n is the number of apparent "100%" cycles, Q_s is the charge stripped (1.1 C/cm²), and Q_{ex} is the charge in the excess Li (3.4 C/cm²) at the start of the experiment.

Solution preparation and the electrochemical experiments themselves were conducted at room temperature under an Ar atmosphere in a Vacuum-Atmospheres Corporation dry box equipped with a Model HE-493 Dri-Train.

Results

Conductivity of Electrolytes. In order to minimize electrolyte IR drop, the electrolyte in a battery should show maximum conductivity. The solvents I and II give electrolytic solutions with greater conductivities than most other non-cyclic ethers.

The conductivities of solutions of LiAsF₆ in ethers are generally high as compared to solutions of other salts such as LiClO₄, LiBF₄, etc. For instance, the maximum conductivity of LiAsF₆ in THF is 0.017 Ω⁻¹ cm⁻¹ (7) as compared to 0.006 and 0.004 for LiClO₄ (8) and LiBF₄ (9), respectively. The ethereal solutions of LiAsF₆ previously known to cycle Li with high efficiency, i.e., 2Me-THF and DEE blends, have maximum specific conductivities in the 0.002-0.004 Ω⁻¹ cm⁻¹ range.

Conductivity vs. concentration profiles for LiAsF_6 in DMM and TMM are shown in Figure 1. The conductivity profiles are typical for solutions of LiAsF_6 in ethers and show maximum conductivities of $\sim 0.0065 \Omega^{-1} \text{ cm}^{-1}$ for DMM and $\sim 0.008 \Omega^{-1} \text{ cm}^{-1}$ for TMM.

Lithium Cycling in Half-Cells. The plating and stripping of Li at 25°C is a rigorous test of electrolyte stability. Electrolytes were evaluated for half-cell cycling efficiency using electrolytes prepared using distilled solvent (D), distilled solvent treated with alumina (DA), and electrolytes that were additionally pre-electrolyzed (DP).

The freshly plated Li, generated during pre-electrolysis, should be especially reactive. It was hoped that this Li would react with impurities in the electrolyte giving insoluble reaction products and thereby purify the electrolyte. The results for DMM and TMM electrolytes are shown in Table 1. This table shows representative cycling efficiencies which illustrate the effect of different purification on Li cycling. In these tests, both electrolytes show high cycling efficiency.

Electrolyte Stability at 70°C . The cycling test above allows the evaluation of room temperature stability of the electrolyte towards freshly plated Li over the period of the experiment, one or two days. An accelerated test for long term stability is the storage of electrolytes at 70°C in the presence and absence of Li. A solvent, 2Me-THF, which has proved useful in Li/TiS_2 cells shows excellent stability when stored with Li at 70°C (7).

Stability tests were conducted by storing samples of 1.5M LiAsF₆ in DMM and TMM in the presence and absence of Li at 70°C. The results are shown in Table 2. The TMM appears more stable with no apparent reaction noted at 20 days at 70°C. These tests may be somewhat misleading. Although no reaction was observed visually, the TMM electrolyte stored at 70°C with Li subsequently failed completely to cycle Li. The DMM results were variable, with the results reported typical of several tests. Despite the apparent lack of stability in DMM electrolytes, the samples stored with Li retained moderate cycling ability.

Discussion

The conductivity of the electrolytes studied make them interesting candidates for Li battery use. However, the stability of the electrolytes under actual cell conditions is of primary concern. This includes stability towards reduction by Li and to thermal decomposition in the bulk electrolyte. The half-cell cycling results indicate a relatively high degree of stability of electrolyte towards Li. However, this test is somewhat insensitive to electrolyte decomposition due to the large excess of electrolyte present. The variation of the cycling efficiency with purification appears to be reproducible. It is attributed to variations of the levels of impurities. What is not clear is the nature of the impurities and whether they improve half-cell and storage test behavior. It may be that the electrolyte containing only pure solvent and salt would give the best results. On the other hand, perhaps small amounts of impurities may scavenge undesirable reactive intermediates. Differentiating between these possibilities is difficult.

In this work, electrolytes which were optimized in half cell work were chosen for storage tests and cycling after storage. The DMM electrolytes (D and DA) gave similar cycling efficiencies before storage and similar, though decreased, efficiencies after storage. The electrolyte purified with alumina (DA) gave contradictory results in that it appeared more stable than the DMM (D) in the presence of Li and less stable in the absence of Li. The TMM electrolyte also gave contradictory results by showing no apparent reaction in stability tests and yet failing to cycle after storage.

The above observations illustrate the difficulty in evaluating electrolytes for Li batteries half-cells and the appearance of storage tests. Further investigation of these electrolytes in Li/TiS₂ test cells as well as a more thorough chemical analysis of the storage tests is in progress.

We wish to acknowledge the support of the Office of Naval Research for this research.

References

1. G. H. Newman in Proceedings of the Workshop on Lithium Nonaqueous Battery Electrochemistry, Vol. 80-7, the Electrochemical Society, Pennington, NJ, 143 (1980).
2. G. H. Newman, R. W. Francis, L. H. Gaines and B. M. L. Rao, J. Electrochem. Soc., 127, 2025 (1980).
3. V. R. Koch and J. H. Young, Science, 204, 499 (1979).
4. V. R. Koch, J. L. Goldman, C. J. Mattos and M. Mulvaney, J. Electrochem. Soc. 129, 1 (1982).
5. P. G. Glugla in Proceedings of the Symposia on Power Sources for Bio-medical Implantable Applications and Ambient Temperature Lithium Batteries, B. B. Owens and N. Margalit, eds., Vol. 80-4, The Electrochemical Society, Pennington, NJ, 407 (1980).
6. V. R. Koch, J. Electrochem. Soc., 126, 181 (1979).
7. J. L. Goldman, R. M. Mank, J. H. Young and V. R. Koch, J. Electrochem. Soc., 127, 1461 (1980).
8. P. Jagodzinski and S. Petrucci, J. Phys. Chem., 78, 917 (1974).
9. S. D. James, J. Chem. Eng. Data, 23, 313 (1978).

FIGURE CAPTION

Fig. 1. Conductivity of LiAsF_6 solutions in DMM and TMM (25°C).

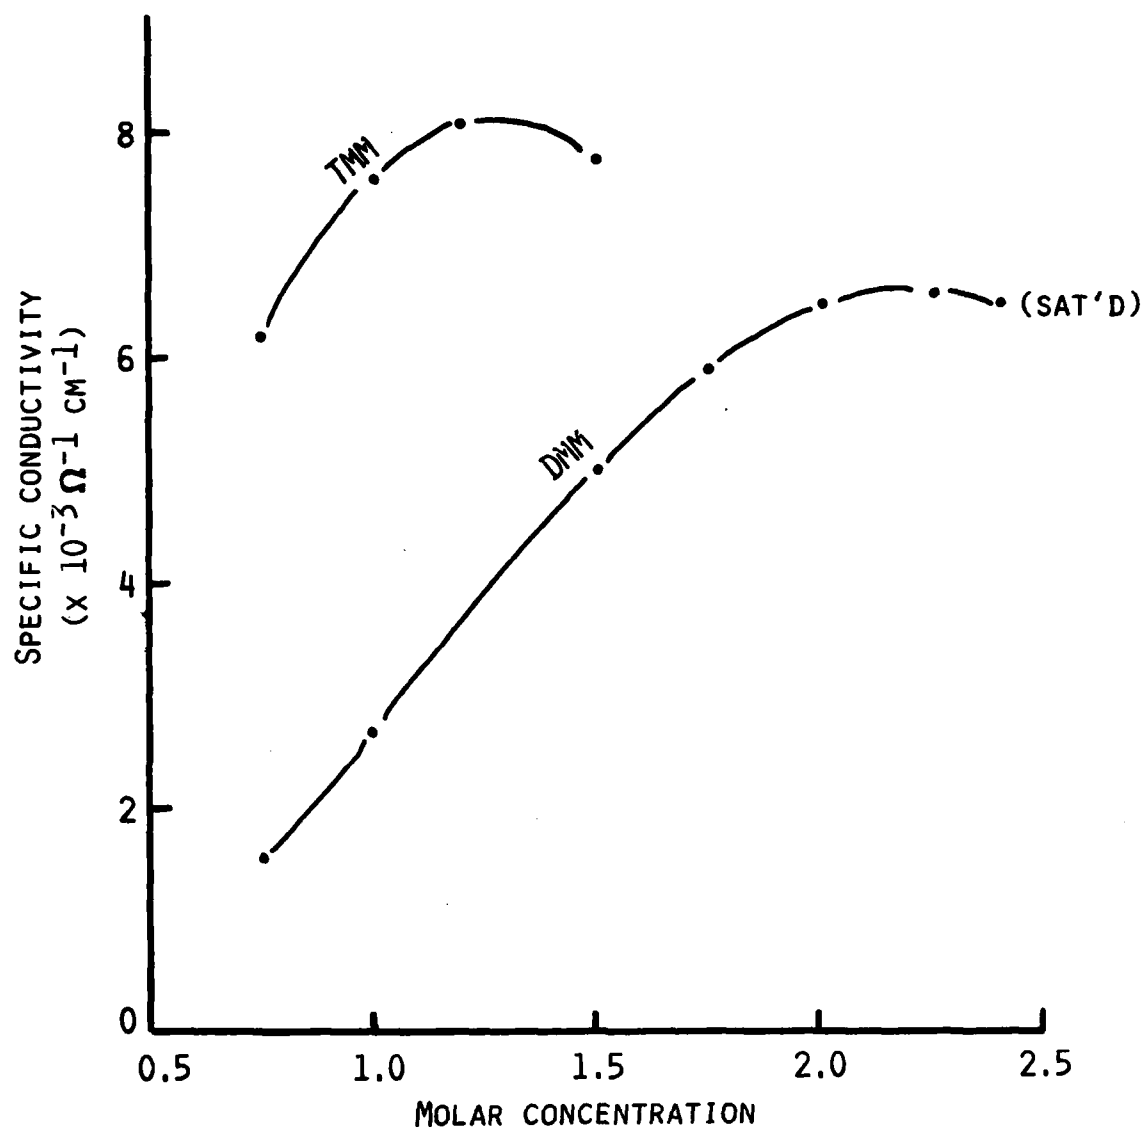


TABLE 1
HALF-CELL CYCLING TESTS USING DMM AND TMM ELECTROLYTES

1.5M LiAsF ₆ in DMM	(D)	97.3%
	(DA)	97.5%
	(DP)	96.5%
1.5M LiAsF ₆ in TMM	(D)	93.2%
	(DP)	95.1%

TABLE 2
STORAGE TESTS AND CYCLING AFTER STORAGE USING DMM AND TMM
ELECTROLYTES AT 70°C

<u>Solvent</u>	<u>With Li</u>	<u>Without Li</u>
DMM (D)	Electrolyte clear with a small amount of Li corrosion at 10 days.	Electrolyte clear >10 days then darkened rapidly.
DMM (D)	Cycled after 10 days storage with Li → 87.5%.	
DMM (DA)	Electrolyte clear with a small amount of Li corrosion, > 1 month.	Electrolyte dark at 6 days.
DMM (DA)	Cycled after 10 days storage with Li → 86.9%.	
TMM (D)	No reaction at 20 days.	No reaction at 20 days.
TMM (DP)	Cycled after 14 days with Li (no reaction) → 0%.	

DISTRIBUTION LIST

Office of Naval Research
Attn: Code 472
800 North Quincy Street
Arlington, VA 22217

ONR Branch Office
Attn: Dr. George Sandoz
536 South Clark Street
Chicago, IL 60605

ONR Area Office
Attn: Scientific Department
715 Broadway
New York, NY 10003

ONR Western Regional Office
1030 East Green Street
Pasadena, CA 91106

ONR Eastern/Central Regional Office
Attn: Dr. L. H. Peebles
Building 114, Section D
666 Summer Street
Boston, MA 02210

Director, Naval Research Laboratory
Attn: Code 6100
Washington, DC 20390

The Assistant Secretary
of the Navy (RE&S)
Department of the Navy
Room 4E736, The Pentagon
Washington, DC 20350

Commander, Naval Air Systems
Command
Attn: Code 310C (H. Rosenwasser)
Department of the Navy
Washington, DC 20360

Defense Technical Information Ctr
Building 5, Cameron Station
Alexandria, VA 22314

Dr. Fred Saalfeld
Chemistry Division, Code 6100
Naval Research Laboratory
Washington, DC 20375

U.S. Army Research Office
Attn: CRD-AA-IP
P. O. Box 12211
Research Triangle Park, NC 27709

Naval Ocean Systems Center
Attn: Mr. Joe McCartney
San Diego, CA 92152

Naval Weapons Center
Attn: Dr. A. B. Amster
Chemistry Division
China Lake, CA 93555

Naval Civil Engineering Laboratory
Attn: Dr. R. W. Drisko
Port Hueneme, CA 93401

Department of Physics & Chemistry
Naval Postgraduate School
Monterey, CA 93940

Dr. A. L. Slafkosky
Scientific Advisor
Commandant of the Marine Corps
(Code RD-1)
Washington, DC 20380

Office of Naval Research
Attn: Dr. Richard S. Miller
800 North Quincy Street
Arlington, VA 22217

Naval Ship R&D Center
Attn: Dr. G. Bosmajian
Applied Chemistry Division
Annapolis, MD 21401

Naval Ocean Systems Center
Attn: Dr. S. Yamamoto
Marine Sciences Division
San Diego, CA 91232

Mr. John Boyle
Materials Branch
Naval Ship Engineering Center
Philadelphia, PA 19112

Dr. Rudolph J. Marcus
Office of Naval Research
Scientific Liaison Group
American Embassy
APO San Francisco, CA 96503

Mr. James Kelley
DTNSRDC Code 2803
Annapolis, MD 21402

Dr. Paul Delahay
Department of Chemistry
New York University
New York, NY 10003

Dr. E. Yeager
Department of Chemistry
Case Western Reserve University
Cleveland, OH 41106

Dr. D. N. Bennion
Department of Chemical Engineering
Brigham Young University
Provo, UT 84602

Dr. R. A. Marcus
Department of Chemistry
California Institute of Technology
Pasadena, CA 91125

Dr. J. J. Auburn
Bell Laboratories
Murray Hill, NJ 07974

Dr. Adam Heller
Bell Laboratories
Murray Hill, NJ 07974

Dr. T. Katan
Lockheed Missiles & Space
Company, Inc.
P. O. Box 504
Sunnyvale, CA 94088

Dr. Joseph Singer
Code 302/1
NASA-Lewis Research Center
21000 Brookpark Road
Cleveland, OH 44135

Dr. S. B. Brummer
EIC Laboratories, Inc.
67 Chapel Street
Newton, MA 02158

Library
P. R. Mallory & Company, Inc.
Northwest Industrial Park
Burlington, MA 01803

Dr. P. J. Hendra
Department of Chemistry
University of Southampton
Southampton SO9-5NH
UNITED KINGDOM

Dr. Sam Perone
Department of Chemistry
Purdue University
West Lafayette, IN 47907

Dr. Royce W. Murray
Department of Chemistry
University of North Carolina
Chapel Hill, NC 27514

Naval Ocean Systems Center
Attn: Technical Library
San Diego, CA 92152

Dr. C. E. Mueller
The Electrochemistry Branch
Materials Division, Research
& Technology Department
Naval Surface Weapons Center
White Oak Laboratory
Silver Spring, MD 20910

Dr. G. Goodman
Globe Union, Inc.
5757 North Green Bay Avenue
Milwaukee, WI 53201

Dr. J. Boechler
Electrochimica Corporation
Attn: Technical Library
2485 Charleston Road
Mountain View, CA 94040

Dr. P. P. Schmidt
Department of Chemistry
Oakland University
Rochester, MI 48063

Dr. H. Richtol
Chemistry Department
Rensselaer Polytechnic Institute
Troy, NY 12181

Dr. A. B. Ellis
Chemistry Department
University of Wisconsin
Madison, WI 53706

Dr. M. Wrighton
Chemistry Department
Massachusetts Institute of
Technology
Cambridge, MA 02139

Larry E. Plew
Naval Weapons Support Center
Code 30736, Building 2906
Crane, IN 47522

Dr. Stanley Ruby
Department of Energy (STOR)
600 E Street
Washington, DC 20545

Dr. Aaron Wold
Brown University
Department of Chemistry
Providence, RI 02192

Dr. R. C. Chudacek
McGraw-Edison Company
Edison Battery Division
P. O. Box 28
Bloomfield, NJ 07003

Dr. A. J. Bard
University of Texas
Department of Chemistry
Austin, TX 78712

Dr. M. M. Nicholson
Electronics Research Center
Rockwell International
3370 Miraloma Avenue
Anaheim, CA 92803

Dr. Donald W. Ernst
Naval Surface Weapons Center
Code R-33
White Oak Laboratory
Silver Spring, MD 20910

Dr. R. P. Van Duyne
Department of Chemistry
Northwestern University
Evanston, IL 60201

Dr. B. Stanley Pons
Department of Chemistry
University of Alberta
Edmonton, Alberta
CANADA T6G 2G2

Dr. Michael J. Weaver
Department of Chemistry
Michigan State University
East Lansing, MI 48824

Dr. R. David Rauh
EIC Laboratories, Inc.
67 Chapel Street
Newton, MA 02158

Dr. J. David Margerum
Research Laboratories Division
Hughes Aircraft Company
3011 Malibu Canyon Road
Malibu, CA 90265

Dr. Martin Fleischmann
Department of Chemistry
University of Southampton
Southampton S09 5NH
UNITED KINGDOM

Dr. Janet Osteryoung
Department of Chemistry
State University of New York
at Buffalo
Buffalo, NY 14214

Dr. R. A. Osteryoung
Department of Chemistry
State University of New York
at Buffalo
Buffalo, NY 14214

Mr. James R. Moden
Naval Underwater Systems Center
Code 3632
Newport, RI 02840

Dr. R. Nowak
Naval Research Laboratory
Code 6130
Washington, DC 20375

Dr. John F. Houlihan
Shenango Valley Campus
Pennsylvania State University
Sharon, PA 16146

Dr. M. G. Sceats
Department of Chemistry
University of Rochester
Rochester, NY 14627

Dr. Alan Bewick
Department of Chemistry
The University
Southampton, S09 5NH
UNITED KINGDOM

Dr. A. Himy
NAVSEA-5433
NC No. 4
2541 Jefferson Davis Highway
Arlington, VA 20362

Dr. John Kincaid
Department of the Navy
Strategic Systems Project Office
Room 901
Washington, DC 20376

M. L. Robertson, Manager
Electrochemical Power Sonics Division
Naval Weapons Support Center
Crane, IN 47522

Dr. Elton Cairns
Energy & Environment Division
Lawrence Berkeley Laboratory
University of California
Berkeley, CA 94720

Dr. Bernard Spielvogel
U. S. Army Research Office
P. O. Box 12211
Research Triangle Park, NC 27709

Dr. Denton Elliott
Air Force Office of Scientific
Research
Building 104
Bolling Air Force Base
Washington, DC 20332

8-8
DTIC